



AP-485

**APPLICATION
NOTE**

**Intel Processor
Identification and the
CPUID Instruction**

June 1997

Order Number : 241618-007

Information in this document is provided in connection with Intel products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not intended for use in medical, life saving, or life sustaining applications.

Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Intel's Intel Architecture processors (e.g., Pentium® processor, Pentium processor with MMX™ technology, and Pentium Pro processor) may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request. Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an ordering number and are referenced in this document, or other Intel literature, may be obtained from:

Intel Corporation
P.O. Box 7641
Mt. Prospect IL 60056-7641

or call 1-800-879-4683
or visit Intel's website at <http://www.intel.com>

Copyright © Intel Corporation 1997.

* Third-party brands and names are the property of their respective owners.

CONTENTS

	PAGE
1.0. INTRODUCTION	5
1.1. Update Support.....	5
2.0. DETECTING THE CPUID INSTRUCTION	5
3.0. OUTPUT OF THE CPUID INSTRUCTION	6
3.1. Vendor ID String.....	8
3.2. Processor Signature.....	8
3.3. Feature Flags.....	10
3.4. Cache Size and Format Information.....	10
3.5. SYSENTER/SYSEXIT – SEP Features Bit	12
3.6. Pentium® Pro Processor Output Example	12
3.7. Pentium® II Processor Output Example.....	13
4.0. USAGE GUIDELINES.....	13
5.0. PROPER IDENTIFICATION SEQUENCE.....	14
6.0. USAGE PROGRAM EXAMPLES.....	15

REVISION HISTORY

Revision	Revision History	Date
-001	Original Issue.	05/93
-002	Modified Table 2, Intel486™ and Pentium® Processor Signatures.	10/93
003	Updated to accommodate new processor versions. Program examples modified for ease of use, section added discussing BIOS recognition for OverDrive® processors, and feature flag information updated	09/94
-004	Updated with Pentium Pro and OverDrive processors information. Modified Tables 1, 3 and 5. Inserted Tables 6, 7 and 8. Inserted Sections 3.4. and 3.5.	12/95
-005	Added Figures 1 and 3. Added Footnotes 1 and 2. Modified Figure 2. Added Assembly code example in Section 4. Modified Tables 3, 5 and 7. Added two bullets in Section 5.0. Modified cpuid3b.ASM and cpuid3b.C programs to determine if processor features MMX™ technology. Modified Figure 6.0.	11/96
-006	<p>Modified Table 3. Added reserved for future member of P6 family processors entry. Modified table header to reflect Pentium II processor family. Modified Table 5. Added SEP bit definition. Added Section 3.5. Added Section 3.7 and Table 9. Corrected references of P6 family to reflect correct usage.</p> <p>Modified cpuid3a.asm, cpuid3b.asm and cpuid3.c example code section: to check for SEP feature bit and to check for, and identify, the Pentium II processor. Added additional disclaimer related to designers and errata</p>	3/97

1.0. INTRODUCTION

As the Intel Architecture evolves with the addition of new generations and models of processors (8086, 8088, Intel286, Intel386™, Intel486™, Pentium® processors, Pentium OverDrive® processors, Pentium processors with MMX™ technology, Pentium OverDrive processors with MMX technology, Pentium Pro processors and Pentium II processors), it is essential that Intel provide an increasingly sophisticated means with which software can identify the features available on each processor. This identification mechanism has evolved in conjunction with the Intel Architecture as follows:

1. Originally, Intel published code sequences that could detect minor implementation or architectural differences to identify processor generations.
2. Later, with the advent of the Intel386 processor, Intel implemented processor signature identification which provided the processor family, model, and stepping numbers to software, but only upon reset.
3. As the Intel Architecture evolved, Intel extended the processor signature identification into the CPUID instruction. The CPUID instruction not only provides the processor signature, but also provides information about the features supported by and implemented on the Intel processor.

The evolution of processor identification was necessary because, as the Intel Architecture proliferates, the computing market must be able to tune processor functionality across processor generations and models that have differing sets of features. Anticipating that this trend will continue with future processor generations, the Intel Architecture implementation of the CPUID instruction is extensible.

This application note explains how to use the CPUID instruction in software applications, BIOS implementations, and various processor tools. By taking advantage of the CPUID instruction, software developers can create software applications and tools that can execute compatibly across the widest range of Intel processor generations and models, past, present, and future.

1.1. Update Support

You can obtain new Intel processor signature and feature bits information from the developer's manual, programmer's reference manual or appropriate documentation for a processor. In addition, you can receive updated versions of the programming examples included in this application note; contact your Intel representative for more information.

2.0. DETECTING THE CPUID INSTRUCTION

Starting with the Intel486 family and subsequent Intel processors, Intel provides a straightforward method for determining whether the processor's internal architecture is able to execute the CPUID instruction. This method uses the ID flag in bit 21 of the EFLAGS register. If software can change the value of this flag, the CPUID instruction is executable.¹ See Figure 1.

Footnotes

- ¹ Only in some Intel486™ and succeeding processors. Bit 21 in the Intel386™ processor's Eflag register cannot be changed by software, and the Intel386 processor cannot execute the CPUID instruction. Execution of CPUID on a processor that does not support this instruction will result in an invalid opcode exception.

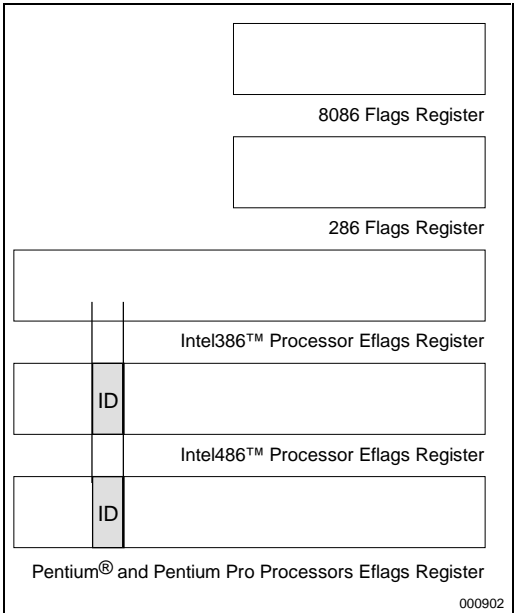


Figure 1. Flag Register Evolution

The POPF, POPFD, PUSHF, and PUSHFD instructions are used to access the Flags, Eflags register. The program examples at the end of this application note show how you use the PUSHFD instruction to read and the POPFD instruction to change the value of the ID flag.

3.0. OUTPUT OF THE CPUID INSTRUCTION

Figure 2 summarizes the outputs of the CPUID instruction. The function of the CPUID instruction is fully dependent upon the contents of the EAX register. This means, by placing different values in the EAX register and then executing CPUID, the CPUID instruction will perform a specific function dependent upon whatever value is resident in the EAX register (see Table 1). In order to determine the highest acceptable value for the EAX register input and CPUID operation, the program should set the EAX register parameter value to "0" and then execute the CPUID instruction as follows

```
MOV EAX, 00H
CPUID
```

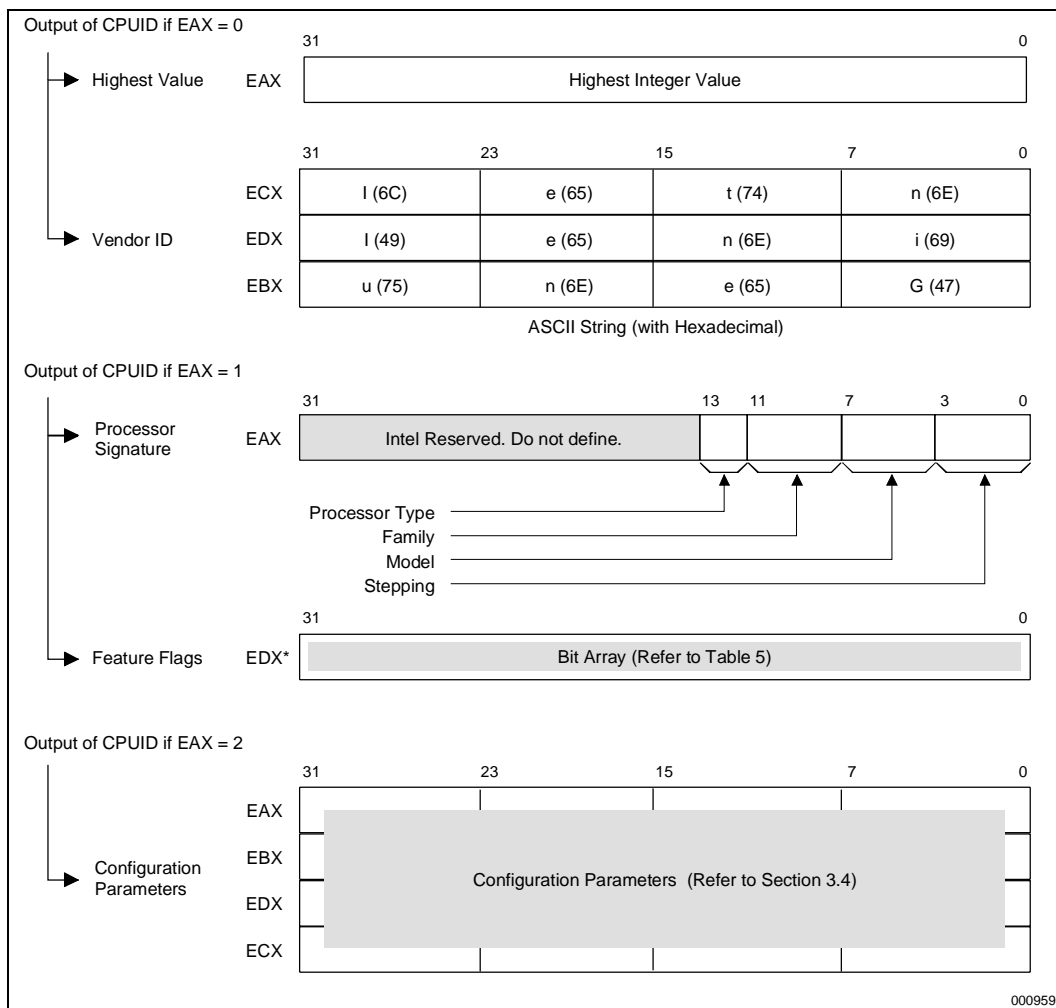


Figure 2. CPUID Instruction Outputs

Table 1. Effects of EAX Contents on CPUID Instruction Output

Parameter	Outputs of CPUID
EAX = 0	EAX ← Highest value recognized by CPUID instruction
	EBX:EDX:ECX ← Vendor identification string
EAX = 1	EAX ← Processor signature
	EDX ← Feature flags

Table 1. Effects of EAX Contents on CPUID Instruction Output

Parameter	Outputs of CPUID
	EBX:ECX ← Intel reserved (Do not use.)
EAX = 2	EAX:EBX:ECX:EDX ← Processor configuration parameters
$3 \leq \text{EAX} \leq$ highest value	Intel reserved
EAX > highest	EAX:EBX:ECX:EDX ← Undefined

Table 1. Effects of EAX Contents on CUID Instruction Output

Parameter	Outputs of CUID
value	(Do not use.)

After the execution of the CUID instruction, a return value will be present in the EAX register. Always use an EAX parameter value that is equal to or greater than zero and less than or equal to this highest EAX "returned" value. The values returned by the processor in response to a CUID instruction with EAX set to a value higher than appropriate for that processor are model specific and should not be relied upon.

3.1. Vendor ID String

In addition to returning the highest value in the EAX register, the Intel Vendor-ID string can be simultaneously verified as well. If the EAX register contains an input value of 0, the CUID instruction also returns the vendor identification string in the EBX, EDX, and ECX registers (see Figure 2). These registers contain the ASCII string:

GenuineIntel

While any imitator of the Intel Architecture can provide the CUID instruction, no imitator can legitimately claim that its part is a genuine Intel part. So the presence of the GenuineIntel string is an assurance that the CUID instruction and the processor signature are implemented as described in this document. If the "GenuineIntel" string is not returned after execution of the CUID instruction, do not rely upon the information described in this document to interpret the information returned by the CUID instruction.

3.2. Processor Signature

Beginning with the Intel486 processor family, the processor will return a processor identification signature value after reset in the EDX register (see Figure 3).




Figure 3. EDX Register Value after RESET

Processors that implement the CUID instruction also return the processor identification signature after reset; however, the CUID instruction gives you the flexibility of checking the processor signature at any time. Figure 3 shows the format of the signature for the Intel486, Pentium, Pentium Pro and Pentium II processors. Note that the EDX processor signature value after reset is equivalent to the processor signature output value in the EAX register in Figure 2. Table 2 shows the values returned in the EAX register currently defined for these processors. (The high-order 18 bits are undefined and reserved.)

The processor type, specified in bit positions 12 and 13 of Table 3, indicates whether the processor is an original OEM processor, an OverDrive processor, or a dual processor (capable of being used in a dual processor system). Table 3 shows the processor type values returned in bits 12 and 13 of the EAX register.

The family values, specified in bit positions 8 through 11, indicates whether the processor belongs to the Intel386, Intel486, Pentium or P6 family of processors.

The model number, specified in bits 4 though 7, indicates the processor's family model number, while the stepping number in bits 0 through 3 indicates the revision number of that model.

Table 2. Intel486™, Pentium® Processor Family, OverDrive®, Pentium Pro Processor and Pentium II Processor Signatures

Type	Family	Model	Stepping	Description
00	0100	0000 and 0001	xxxx (1)	Intel486™ DX processors
00	0100	0010	xxxx (1)	Intel486 SX processors
00	0100	0011	xxxx (1)	Intel487™ processors
00	0100	0011	xxxx (1)	IntelDX2™ processors
00	0100	0011	xxxx (1)	IntelDX2 OverDrive® processors
00	0100	0100	xxxx (3)	Intel486 SL processor
00	0100	0101	xxxx (1)	IntelSX2™ processors
00	0100	0111	xxxx (3)	Write-Back Enhanced IntelDX2 processors
00	0100	1000	xxxx (3)	IntelDX4™ processors
00, 01	0100	1000	xxxx (3)	IntelDX4 OverDrive processors
00	0101	0001	xxxx (2)	Pentium® processors (60, 66)
00	0101	0010	xxxx (2)	Pentium processors (75, 90, 100, 120, 133, 150, 166, 200)
00	0101	0001	xxxx (2)	Pentium OverDrive processor for Pentium processor (60, 66)
01 (4)	0101	0010	xxxx (2)	Pentium OverDrive processor for Pentium processor (75, 90, 100, 120, 133)
01	0101	0011	xxxx (2)	Pentium OverDrive processors for Intel486 processor-based systems
00	0101	0100	xxxx (2)	Pentium processor with MMX™ technology (166, 200)
01	0101	0100	xxxx (2)	Reserved for a future OverDrive processor for Pentium processor (75, 90, 100, 120, 133)
00	0110	0001	xxxx (2)	Pentium Pro processor
00	0110	0011	xxxx (2)	Pentium II processor
00	0110	0101	xxxx (2)	Reserved for future member of P6 family of processors
01	0110	0011	xxxx (2)	Reserved for a future OverDrive processor for Pentium Prc processor

NOTES:

1. This processor does not implement the CPUID instruction.
2. Refer to the Intel486™ documentation, the *Pentium® Processor Specification Update* (Order Number 242480), the *Pentium® Pro Processor Specification Update* (Order Number 242689), or the *Pentium® II Processor Specification Update* (Order Number 243337) for the latest list of stepping numbers.
3. Stepping 3 implements the CPUID instruction.
4. The definition of the type field for the OverDrive® processor is 01h. An errata on the Pentium OverDrive processor will always return 00h as the type.

**Table 3. Processor Type
(Bit Positions 13 and 12)**

Value	Description
00	Original OEM processor
01	OverDrive® processor
10	Dual processor
11	Intel reserved (Do not use.)

Older versions of Intel486 SX, Intel486 DX and IntelDX2 processors do not support the CPUID instruction,² so they can only return the processor signature at reset. Refer to Table 2 to determine which processors support the CPUID instruction.

Figure 4 shows the format of the processor signature for Intel386 processors, which are different from other processors. Table 4 shows the values currently defined for these Intel386 processors.

3.3. Feature Flags

When the EAX register contains a value of 1, the CPUID instruction (in addition to loading the

processor signature in the EAX register) loads the EDX register with the feature flags. The current feature flags (when Flag = 1) indicate what features the processor supports. However, in future feature flags, a value of one may indicate a feature has been removed. Table 5 lists the currently defined feature flag values.

For future processors, refer to the programmer's reference manual, user's manual, or the appropriate documentation for the latest feature flag values.

Use the feature flags in your applications to determine which processor features are supported. By using the CPUID feature flags to predetermine processor features, your software can detect and avoid incompatibilities.

3.4. Cache Size and Format Information

When the EAX register contains a value of 2, the CPUID instruction loads the EAX, EBX, ECX and EDX registers with descriptors that indicate the processor's cache characteristics. The lower 8 bits of the EAX register (AL) contain a value that identifies the number of times the CPUID has to be executed to obtain a complete image of the processor's caching systems. For example, the Pentium Pro processor returns a value of 1 in the lower 8 bits of the EAX register to indicate that the CPUID instruction need only be executed once (with EAX = 2) to obtain a complete image of the processor configuration.

Footnotes

² All Intel486 SK-enhanced and Write-Back enhanced processors are capable of executing the CPUID instruction. See Table 2.

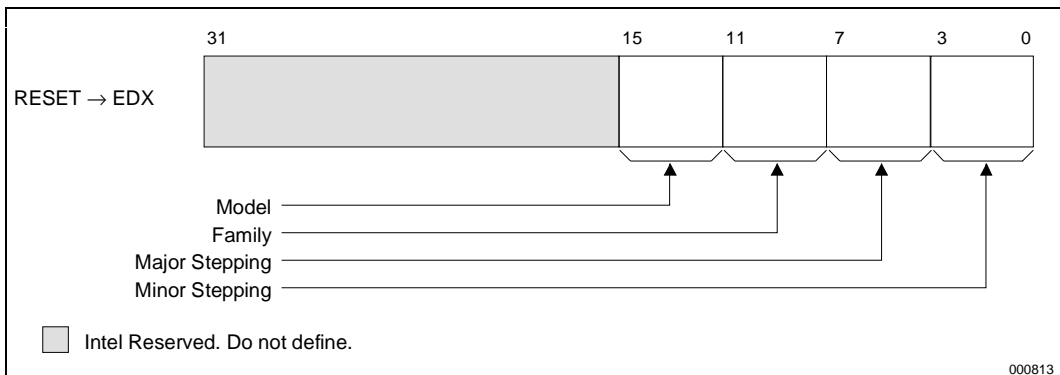


Figure 4. Processor Signature Format on Intel386™ Processors

Table 4. Intel386™ Processor Signatures

Type	Family	Major Stepping	Minor Stepping	Description
0000	0011	0000	xxxx	Intel386™ DX processor
0010	0011	0000	xxxx	Intel386 SX processor
0010	0011	0000	xxxx	Intel386 CX processor
0010	0011	0000	xxxx	Intel386 EX processor
0100	0011	0000 and 0001	xxxx	Intel386 SL processor
0000	0011	0100	xxxx	RapidCAD® coprocessor

Table 5. Feature Flag Values

Bit	Name	Description when Flag = 1	Comments
0	FPU	Floating-point unit on-chip	The processor contains an FPU that supports the Intel387 floating-point instruction set.
1	VME	Virtual Mode Extension	The processor supports extensions to virtual-8086 mode.
2	DE	Debugging Extension	The processor supports I/O breakpoints, including the CR4.DE bit for enabling debug extensions and optional trapping of access to the DR4 and DR5 registers.
3	PSE	Page Size Extension	The processor supports 4-Mbyte pages.
4	TSC	Time Stamp Counter	The RDTSC instruction is supported including the CR4.TSD bit for access/privilege control.
5	MSR	Model Specific Registers	Model Specific Registers are implemented with the RDMSR, WRMSR instructions
6	PAE	Physical Address Extension	Physical addresses greater than 32 bits are supported.
7	MCE	Machine Check Exception	Machine Check Exception, Exception 18, and the CR4.MCE enable bit are supported
8	CX8	CMPXCHG8 Instruction Supported	The compare and exchange 8 bytes instruction is supported.
9	APIC	On-chip APIC Hardware Supported (1)	The processor contains a local APIC.
10	MTRR	Reserved	Do not count on their value.
11	SEP	Fast System Call	Indicates whether the processor supports the Fast System Call instructions, SYSENTER and SYSEXIT. NOTE: Refer to Section 3.5. for further information regarding SYSENTER/ SYSEXIT feature and SEP feature bit.
12	MTRR	Memory Type Range Registers	The Processor supports the Memory Type Range Registers specifically the MTRR_CAP register.
13	PGE	Page Global Enable	The global bit in the PDEs and PTEs and the CR4.PGE enable bit are supported.
14	MCA	Machine Check Architecture	The Machine Check Architecture is supported, specifically the MCG_CAP register.
15	CMOV	Conditional Move Instruction Supported	The processor supports CMOVcc, and if the FPU feature flag (bit 0) is also set, supports the FCMOVCC and FCOMI instructions.
16 – 22	—	Reserved	Do not count on their value.
23	MMX™ Technology	Intel Architecture MMX technology supported	The processor supports the MMX technology instruction set extensions to Intel Architecture.
24 – 31	—	Reserved	Do not count on their value.

NOTE:

1. The processor contains a software-accessible Local APIC.

The remainder of the EAX register, and the EBX, ECX, and EDX registers, contain valid 8 bit descriptors. Table 6 shows that a most significant bit of zero indicates a valid 8-bit descriptor. To decode descriptors, move sequentially from the most significant byte of the register down through the least significant byte of the register. Table 7 lists the current descriptor values and their respective cache characteristics. This list will be extended in the future as necessary.

Table 6. Descriptor Formats

Register MSB	Descriptor Type	Description
1	Reserved	Reserved for future use.
0	8 bit descriptors	Descriptors point to a parameter table to identify cache characteristics. The descriptor is null if it has a 0 value.

Table 7. Descriptor Decode Values

Descriptor Value	Cache Description
00h	Null
01h	Instruction TLB, 4K pages, 4-way set associative, 32 entries
02h	Instruction TLB, 4M pages, 4-way set associative, 4 entries
03h	Data TLB, 4K pages, 4-way set associative, 64 entries
04h	Data TLB, 4M pages, 4-way set associative, 8 entries
06h	Instruction cache, 8K, 4-way set associative, 32 byte line size
08h	16KB instruction cache, 4-way set associative, 32 byte line size
0Ah	Data cache, 8K, 2-way set associative, 32 byte line size
0Ch	16KB data cache, 2-way set associative, 32 byte line size
40h	No L2 cache
41h	Unified cache, 32 byte cache line, 4-way set associative, 128K
42h	Unified cache, 32 byte cache line, 4-way set associative, 256K
43h	Unified cache, 32 byte cache line, 4-way set associative, 512K

3.5. SYSENTER/SYSEXIT – SEP Features Bit

The presence of this facility is indicated by the SYSENTER Present (SEP) bit 11 of CPUID. An operating system that detects the presence of the SEP bit must also qualify the processor family and model to ensure that the SYSENTER/SYSEXIT instructions are actually present:

```

If (CPUID SEP bit is set) {
If (Family == 6) AND (Model < 3) AND
    (Stepping < 3) {
    THEN
Fast System Call is NOT supported
    }
    ELSE Fast System Call is
        supported
}

```

The Pentium Pro processor (Model = 1) returns a set SEP CPUID feature bit, but should not be used by software.

3.6. Pentium® Pro Processor Output Example

The Pentium Pro processor returns the values shown in Table 8. As the value of AL = 1, it is valid to interpret the remainder of the registers according to Table 7. Table 8 also shows that the MSB of the EAX register is 0. This indicates that the upper 8 bits constitute an 8 bit descriptor. The remaining register values in Table 8 show that the Pentium Pro processor has the following cache characteristics:

- A data TLB that maps 4K pages, is 4 way set associative, and has 64 entries.
- An instruction TLB that maps 4M pages, is 4 way set associative, and has 4 entries.
- An instruction TLB that maps 4K pages, is 4 way set associative, and has 32 entries.
- An instruction cache that is 8K, is 4 way set associative, and has a 32 byte line size.
- A data TLB that maps 4M pages, is 4 way set associative, and has 8 entries.
- A data cache that is 8K, is 2 way set associative, and has a 32 byte line size.
- A unified cache that is 256K, is 4 way set associative, and has a 32 byte line size.

Table 8. Pentium® Pro Processor,with 256K L2 Cache, CPUID (EAX=2) Example Return Values

	31	23	15	7	0
EAX	03h	02h	01h	01h	
EBX	0	0	0	0	
ECX	0	0	0	0	
EDX	06h	04h	0Ah	42h	

3.7. Pentium® II Processor Output Example

The Pentium II processor returns the values shown in Table 9. If the value of AL=1, it is valid to interpret the remainder of the registers according to Table 7. Table 9 also shows the MSB of EAX register is 0. As with the Pentium Pro processor this indicates the upper 8 bits constitute an 8 bit descriptor. The remaining register values in Table 9 shows the Pentium II processor has the following cache characteristics:

- A data TLB that maps 4K pages, is 4 way set associative, and has 64 entries.
- An instruction TLB that maps 4M pages, is 4 way set associative, and has 4 entries.
- An instruction TLB that maps 4K pages, is 4 way set associative, and has 32 entries.
- A data cache that is 16K, is 4 way set associative, and has a 32 byte line size.
- A data TLB that maps 4M pages, is 4 way set associative, and has 8 entries.
- An instruction cache that is 16K, is 4 way set associative, and has a 32 byte line size.
- A unified cache that is 512K, is 4 way set associative, and has a 32 byte line size.

4.0. USAGE GUIDELINES

This document presents Intel-recommended feature-detection methods. Software should not try to identify features by exploiting programming tricks, undocumented features, or otherwise deviating from the guidelines presented in this application note.

The following guidelines are intended to help programmers maintain the widest range of compatibility for their software.

- Do not depend on the absence of an invalid opcode trap on the CPUID opcode to detect the CPUID instruction. Do not depend on the absence of an invalid opcode trap on the PUSHFD opcode to detect a 32-bit processor. Test the ID flag, as described in Section 2.0, and shown in Section 5.0.
- Do not assume that a given family or model has any specific feature. For example, do not assume the family value 5 (Pentium processor) means there is a floating-point unit on-chip. Use the feature flags for this determination.
- Do not assume processors with higher family or model numbers have all the features of a processor with a lower family or model number. For example, a processor with a family value of 6 (Pentium Pro processor) may not necessarily have all the features of a processor with a family value of 5.

Table 9. Pentium® Processor with 512K L2 Cache, CPUID (EAX=2) Example Return Values

	31	23	15	7	0
EAX	03h	02h	01h	01h	
EBX	0	0	0	0	
ECX	0	0	0	0	

Table 9. Pentium® Processor with 512K L2 Cache, CPUID (EAX=2) Example Return Values

EDX	0Ch	04h	08h	43h
-----	-----	-----	-----	-----

- Do not assume that the features in the OverDrive processors are the same as those in the OEM version of the processor. Internal caches and instruction execution might vary.
- Do not use undocumented features of a processor to identify steppings or features. For example, the Intel386 processor A-step had bit instructions that were withdrawn with B-step. Some software attempted to execute these instructions and depended on the invalid-opcode exception as a signal that it was not running on the A-step part. The software failed to work correctly when the Intel486 processor used the same opcodes for different instructions. The software should have used the stepping information in the processor signature.
- Do not assume a value of 1 in a feature flag indicates that a given feature is present. For future feature flags, a value of 1 may indicate that the specific feature is not present.
- Test feature flags individually and do not make assumptions about undefined bits. For example, it would be a mistake to test the FPU bit by comparing the feature register to a binary 1 with a compare instruction.
- Do not assume the clock of a given family or model runs at a specific frequency, and do not write clock-dependent code, such as timing loops. For instance, an OverDrive Processor could operate at a higher internal frequency and still report the same family and/or model. Instead, use the system's timers to measure elapsed time. For processors that support the TSC (Time Stamp Counter) functionality, system timers can more directly calibrate the processor core block.
- Processor model-specific registers may differ among processors, including in various models of the Pentium processor. Do not use these registers unless identified for the installed processor. This is particularly important for systems upgradeable with an OverDrive processor. Only use Model Specific registers that are defined in the BIOS writers guide for that processor.
- Do rely on the result of CPUID algorithm when executed in virtual 8086 mode.
- Do not assume any ordering of stepping numbers. They are assigned arbitrarily.

5.0. PROPER IDENTIFICATION SEQUENCE

The cpuid3a.asm program example demonstrates the correct use of the CPUID instruction. (See Example 1.) It also shows how to identify earlier processor generations that do not implement the processor signature or CPUID instruction. (See Figure 5.) This program example contains the following two procedures:

- `get_cpu_type` identifies the processor type. Figure 5 illustrates the flow of this procedure.
- `get_fpu_type` determines the type of floating-point unit (FPU) or math coprocessor (MCP).

This procedure has been tested with 8086, 80286, Intel386, Intel486, Pentium processor, Pentium processor with MMX technology, OverDrive processor with MMX technology, Pentium Pro processors and Pentium II processors with MMX technology. This program example is written in assembly language and is suitable for inclusion in a run-time library, or as system calls in operating systems.

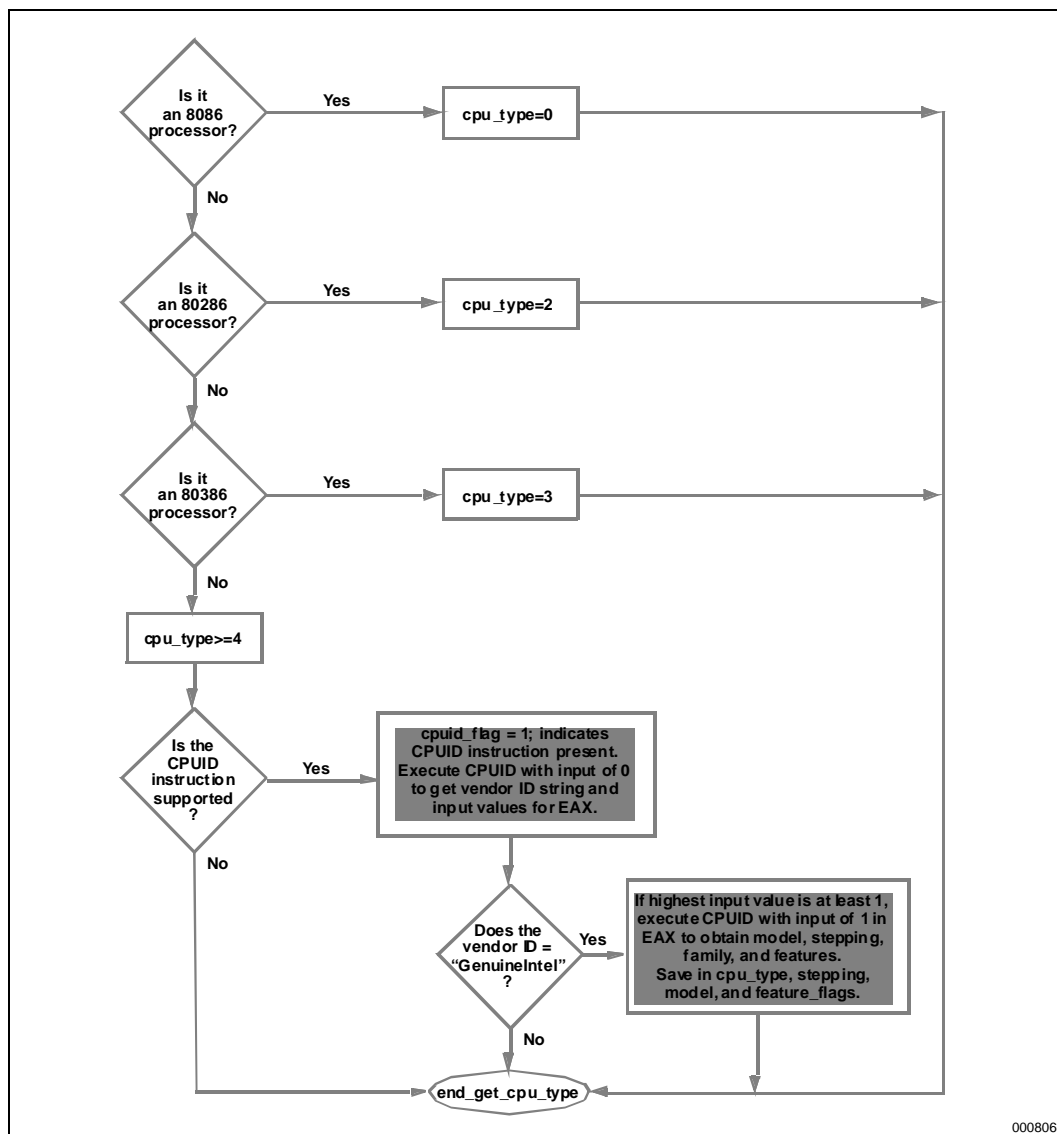


Figure 5. Flow of Processor get_cpu_type Procedure

6.0. USAGE PROGRAM EXAMPLES

The cpuid3b.asm or cpuid3.c program examples demonstrate applications that call `get_cpu_type` and `get_fpu_type` procedures and interpret the returned information. This code is shown in Example 2 and Example 3. The results, which are displayed on the monitor, identify the installed

processor and features. The cpuid3b.asm example is written in assembly language and demonstrates an application that displays the returned information in the DOS environment. The cpuid3.c example is written in the C language (see Example 2 and Example 3). Figure 6 presents an overview of the relationship between the three program examples.

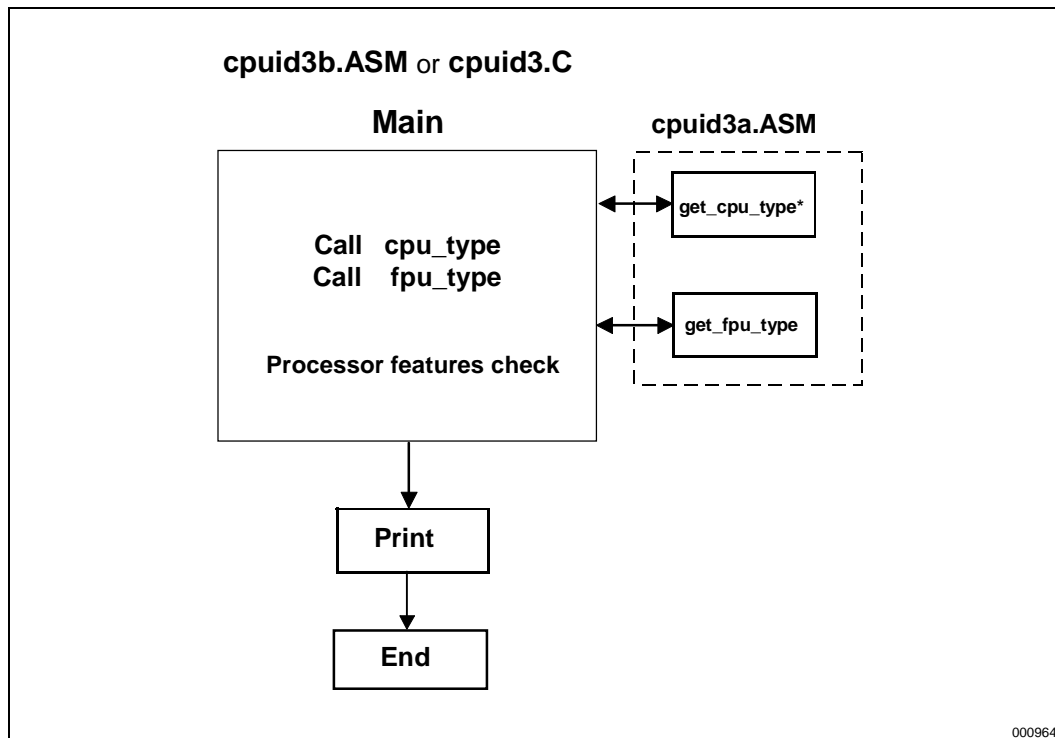


Figure 6. Flow of Processor Identification Extraction Procedure

Example 1. Processor Identification Extraction Procedure

```

; Filename:  cpuid3a.asm
; Copyright 1993, 1994, 1995, 1996, 1997 by Intel Corp.
;
; This program has been developed by Intel Corporation. Intel
; has various intellectual property rights which it may assert
; under certain circumstances, such as if another
; manufacturer's processor mis-identifies itself as being
; "GenuineIntel" when the CPUID instruction is executed.
;
; Intel specifically disclaims all warranties, express or
; implied, and all liability, including consequential and other
; indirect damages, for the use of this program, including
; liability for infringement of any proprietary rights,
; and including the warranties of merchantability and fitness
; for a particular purpose. Intel does not assume any
; responsibility for any errors which may appear in this program
; nor any responsibility to update it.
;
; This code contains two procedures:
; _get_cpu_type: Identifies processor type in _cpu_type:
;               0=8086/8088 processor
;               2=Intel 286 processor
;               3=Intel386(TM) family processor
;               4=Intel486(TM) family processor
;               5=Pentium(R) family processor
;               6=P6 family of processors
;
; _get_fpu_type: Identifies FPU type in _fpu_type:
;               0=FPU not present
;               1=FPU present
;               2=287 present (only if _cpu_type=3)
;               3=387 present (only if _cpu_type=3)
;
; This program has been tested with the Microsoft Developer Studio.
; This code correctly detects the current Intel 8086/8088,
; 80286, 80386, 80486, Pentium(R), Pentium(R) Pro, and Pentium(R) II
; processors in the real-address mode only.
;
; To assemble this code with TASM, add the JUMPS directive.
; jumps                      ; Uncomment this line for TASM
;
; TITLE cpuid3a
;
; comment this line for 32-bit segments
;
; DOSSEG
;
; uncomment the following 2 lines for 32-bit segments
;
; .386
; .model      flat
;

```

```

;      comment this line for 32-bit segments
;
;      .model      small

CPU_ID      MACRO
db          0fh                      ; Hardcoded CPUID instruction
db          0a2h
ENDM

.data
public      _cpu_type
public      _fpu_type
public      _v86_flag
public      _cpuid_flag
public      _intel_CPU
public      _vendor_id
public      _cpu_signature
public      _features_ecx
public      _features_edx
public      _features_ebx
public      _sep_flag

_cpu_type    db      0
_fpu_type    db      0
_v86_flag    db      0
_cpuid_flag  db      0
_intel_CPU   db      0
_sep_flag    db      0
_vendor_id   db      "-----"
intel_id     db      "GenuineIntel"
_cpu_signature dd     0
_features_ecx dd     0
_features_edx dd     0
_features_ebx dd     0
fp_status    dw      0

.code
;
;      comment this line for 32-bit segments
;
;      .8086
;
;      uncomment this line for 32-bit segments
;
;      .386

;*****

public      _get_cpu_type
_get_cpu_type proc

;      This procedure determines the type of processor in a system
;      and sets the _cpu_type variable with the appropriate
;      value.  If the CPUID instruction is available, it is used
;      to determine more specific details about the processor.
;      All registers are used by this procedure, none are preserved.

```

```

;      To avoid AC faults, the AM bit in CR0 must not be set.

;      Intel 8086 processor check
;      Bits 12-15 of the FLAGS register are always set on the
;      8086 processor.

;
;      For 32-bit segments comment the following lines down to the next
;      comment line that says "STOP"
;
check_8086:
    pushf                                ; push original FLAGS
    pop  ax                             ; get original FLAGS
    mov  cx, ax                         ; save original FLAGS
    and  ax, 0ffffh                     ; clear bits 12-15 in FLAGS
    push ax                             ; save new FLAGS value on stack
    popf                                ; replace current FLAGS value
    pushf                                ; get new FLAGS
    pop  ax                             ; store new FLAGS in AX
    and  ax, 0f000h                     ; if bits 12-15 are set, then
    cmp  ax, 0f000h                     ; processor is an 8086/8088
    mov  _cpu_type, 0                   ; turn on 8086/8088 flag
    jne  check_80286                   ; go check for 80286
    push sp                             ; double check with push sp
    pop  dx                             ; if value pushed was different
    cmp  dx, sp                         ; means it's really not an 8086
    jne  end_cpu_type                   ; jump if processor is 8086/8088
    mov  _cpu_type, 10h                  ; indicate unknown processor
    jmp  end_cpu_type

;      Intel 286 processor check
;      Bits 12-15 of the FLAGS register are always clear on the
;      Intel 286 processor in real-address mode.

.286
check_80286:
    smsw ax                             ; save machine status word
    and  ax, 1                           ; isolate PE bit of MSW
    mov  _v86_flag, al                   ; save PE bit to indicate V86

    or   cx, 0f000h                     ; try to set bits 12-15
    push cx                             ; save new FLAGS value on stack
    popf                                ; replace current FLAGS value
    pushf                                ; get new FLAGS
    pop  ax                             ; store new FLAGS in AX
    and  ax, 0f000h                     ; if bits 12-15 are clear
    mov  _cpu_type, 2                     ; processor=80286, turn on 80286 flag
    jz   end_cpu_type                     ; jump if processor is 80286

;      Intel386 processor check
;      The AC bit, bit #18, is a new bit introduced in the EFLAGS
;      register on the Intel486 processor to generate alignment
;      faults.
;      This bit cannot be set on the Intel386 processor.

.386

```

```

;
; "STOP"
;
; ; it is safe to use 386 instructions
check_80386:
    pushfd                ; push original EFLAGS
    pop    eax            ; get original EFLAGS
    mov    ecx, eax       ; save original EFLAGS
    xor    eax, 40000h    ; flip AC bit in EFLAGS
    push  eax            ; save new EFLAGS value on stack
    popfd                ; replace current EFLAGS value
    pushfd                ; get new EFLAGS
    pop    eax            ; store new EFLAGS in EAX
    xor    eax, ecx       ; can't toggle AC bit, processor=80386
    mov    _cpu_type, 3   ; turn on 80386 processor flag
    jz     end_cpu_type   ; jump if 80386 processor

    push  ecx
    popfd                ; restore AC bit in EFLAGS first

; Intel486 processor check
; Checking for ability to set/clear ID flag (Bit 21) in EFLAGS
; which indicates the presence of a processor with the CPUID
; instruction.

    .486
check_80486:
    mov    _cpu_type, 4   ; turn on 80486 processor flag
    mov    eax, ecx       ; get original EFLAGS
    xor    eax, 200000h   ; flip ID bit in EFLAGS
    push  eax            ; save new EFLAGS value on stack
    popfd                ; replace current EFLAGS value
    pushfd                ; get new EFLAGS
    pop    eax            ; store new EFLAGS in EAX
    xor    eax, ecx       ; can't toggle ID bit,
    je     end_cpu_type   ; processor=80486

; Execute CPUID instruction to not determine vendor, family,
; model, stepping and features. For the purpose of this
; code, only the initial set of CPUID information is saved.

    mov    _cpuid_flag, 1 ; flag indicating use of CPUID inst.
    push  ebx              ; save registers
    push  esi
    push  edi
    mov    eax, 0          ; set up for CPUID instruction
    CPUID                  ; get and save vendor ID

    mov    dword ptr _vendor_id, ebx
    mov    dword ptr _vendor_id[+4], edx
    mov    dword ptr _vendor_id[+8], ecx

    cmp    dword ptr intel_id, ebx
    jne    end_cpuid_type
    cmp    dword ptr intel_id[+4], edx
    jne    end_cpuid_type

```

```

    cmp     dword ptr intel_id[+8], ecx
    jne     end_cpuid_type           ; if not equal, not an Intel processor

    mov     _intel_CPU, 1           ; indicate an Intel processor
    cmp     eax, 1                  ; make sure 1 is valid input for CPUID
    jl      end_cpuid_type         ; if not, jump to end
    mov     eax, 1
    CPU_ID                                     ; get family/model/stepping/features
    mov     _cpu_signature, eax
    mov     _features_ebx, ebx
    mov     _features_edx, edx
    mov     _features_ecx, ecx

    shr     eax, 8                  ; isolate family
    and     eax, 0fh
    mov     _cpu_type, al           ; set _cpu_type with family

end_cpuid_type:
    pop     edi                    ; restore registers
    pop     esi
    pop     ebx

;
;   comment this line for 32-bit segments
;
    .8086
end_cpu_type:
    ret
_get_cpu_type                endp

; *****

    public     _get_fpu_type
_get_fpu_type                proc

;   This procedure determines the type of FPU in a system
;   and sets the _fpu_type variable with the appropriate value.
;   All registers are used by this procedure, none are preserved.

;   Coprocessor check
;   The algorithm is to determine whether the floating-point
;   status and control words are present.  If not, no
;   coprocessor exists.  If the status and control words can
;   be saved, the correct coprocessor is then determined
;   depending on the processor type.  The Intel386 processor can
;   work with either an Intel287 NDP or an Intel387 NDP.
;   The infinity of the coprocessor must be checked to determine
;   the correct coprocessor type.

    fninit                                     ; reset FP status word
    mov     fp_status, 5a5ah                 ; initialize temp word to non-zero
    fnstsw     fp_status                     ; save FP status word
    mov     ax, fp_status                    ; check FP status word
    cmp     al, 0                           ; was correct status written
    mov     _fpu_type, 0                     ; no FPU present
    jne     end_fpu_type

```

```

check_control_word:
    fnstcw      fp_status      ; save FP control word
    mov     ax, fp_status      ; check FP control word
    and     ax, 103fh          ; selected parts to examine
    cmp     ax, 3fh            ; was control word correct
    mov     _fpu_type, 0
    jne     end_fpu_type       ; incorrect control word, no FPU
    mov     _fpu_type, 1

;      80287/80387 check for the Intel386 processor

check_infinity:
    cmp     _cpu_type, 3
    jne     end_fpu_type
    fldl                     ; must use default control from FNINIT
    fldz                     ; form infinity
    fdiv                     ; 8087/Intel287 NDP say +inf = -inf
    fld     st                ; form negative infinity
    fchs                     ; Intel387 NDP says +inf <> -inf
    fcompp                     ; see if they are the same
    fstsw fp_status          ; look at status from FCOMPP
    mov     ax, fp_status
    mov     _fpu_type, 2      ; store Intel287 NDP for FPU type
    sahf                     ; see if infinities matched
    jz      end_fpu_type      ; jump if 8087 or Intel287 is present
    mov     _fpu_type, 3      ; store Intel387 NDP for FPU type
end_fpu_type:
    ret
_get_fpu_type      endp
end

```

Example 2. Processor Identification Procedure in Assembly Language

```

;      Filename:  cpuid3b.asm
;      Copyright 1993, 1994, 1995, 1996, 1997 by Intel Corp.
;
;      This program has been developed by Intel Corporation.  Intel
;      has various intellectual property rights which it may assert
;      under certain circumstances, such as if another
;      manufacturer's processor mis-identifies itself as being
;      "GenuineIntel" when the CPUID instruction is executed.
;
;      Intel specifically disclaims all warranties, express or
;      implied, and all liability, including consequential and
;      other indirect damages, for the use of this program,
;      including liability for infringement of any proprietary
;      rights, and including the warranties of merchantability and
;      fitness for a particular purpose.  Intel does not assume any
;      responsibility for any errors which may appear in this
;      program nor any responsibility to update it.
;
;      This program contains three parts:
;      Part 1:      Identifies processor type in the variable
;                   _cpu_type:
;
;

```

```

; Part 2:      Identifies FPU type in the variable _fpu_type:
;
; Part 3:      Prints out the appropriate message. This part is
;               specific to the DOS environment and uses the DOS
;               system calls to print out the messages.
;
; This program has been tested with the Microsoft Developer Studio. If
; this code is assembled with no options specified and linked
; with the cpuid3a module, it correctly identifies the current
; Intel 8086/8088, 80286, 80386, 80486, Pentium(R), Pentium(R) Pro,
; and Pentium(R) II processors in the real-address mode.
;
; To assemble this code with TASM, add the JUMPS directive.
; jumps                ; Uncomment this line for TASM

TITLE cpuid3b

;
; comment this line for 32-bit segments
;
DOSSEG

;
; uncomment the following 2 lines for 32-bit segments
;
; .386
; .model      flat
;
; comment the following line for 32-bit segments
;
.model      small
.stack      100h

.data
extrn      _cpu_type:      byte
extrn      _fpu_type:      byte
extrn      _cpuid_flag:    byte
extrn      _intel_CPU:     byte
extrn      _vendor_id:     byte
extrn      _sep_flag:      byte
extrn      _cpu_signature: dword
extrn      _features_ecx:  dword
extrn      _features_edx:  dword
extrn      _features_ebx:  dword

; The purpose of this code is to identify the processor and
; coprocessor that is currently in the system. The program
; first determines the processor type. Then it determines
; whether a coprocessor exists in the system. If a
; coprocessor or integrated coprocessor exists, the program
; identifies the coprocessor type. The program then prints
; the processor and floating point processors present and type.

.code
; comment this line for 32-bit segments
; .8086
start:
; comment the next three lines for 32-bit segments

```

```

mov     ax, @data
mov     ds, ax                ; set segment register
mov     es, ax                ; set segment register
and     sp, not 3             ; align stack to avoid AC fault
call    _get_cpu_type         ; determine processor type
call    _get_fpu_type
call    print
mov     ax, 4c00h             ; terminate program
int     21h

; *****

extrn _get_cpu_type: proc

; *****

extrn _get_fpu_type: proc

; *****

FPU_FLAG      equ 0001h
VME_FLAG      equ 0002h
DE_FLAG       equ 0004h
PSE_FLAG      equ 0008h
TSC_FLAG      equ 0010h
MSR_FLAG      equ 0020h
PAE_FLAG      equ 0040h
MCE_FLAG      equ 0080h
CX8_FLAG      equ 0100h
APIC_FLAG     equ 0200h
SEP_FLAG      equ 0800h
MTRR_FLAG     equ 1000h
PGE_FLAG      equ 2000h
MCA_FLAG      equ 4000h
CMOV_FLAG     equ 8000h
MMX_FLAG      equ 800000h

.data
id_msg        db "This system has a$"
cp_error      db "n unknown processor$"
cp_8086       db "n 8086/8088 processor$"
cp_286        db "n 80286 processor$"
cp_386        db "n 80386 processor$"

cp_486        db "n 80486DX, 80486DX2 processor or"
              db " 80487SX math coprocessor$"
cp_486sx      db "n 80486SX processor$"

fp_8087       db " and an 8087 math coprocessor$"
fp_287        db " and an 80287 math coprocessor$"
fp_387        db " and an 80387 math coprocessor$"

intel486_msg  db " Genuine Intel486(TM) processor$"
intel486dx_msg db " Genuine Intel486(TM) DX processor$"
intel486sx_msg db " Genuine Intel486(TM) SX processor$"
inteldx2_msg  db " Genuine IntelDX2(TM) processor$"

```



```

intelsx2_msg      db      " Genuine IntelSX2(TM) processor$"
inteldx4_msg      db      " Genuine IntelDX4(TM) processor$"
inteldx2wb_msg    db      " Genuine Write-Back Enhanced"
                  db      " IntelDX2(TM) processor$"
pentium_msg       db      " Genuine Intel Pentium(R) processor$"
pentiumpro_msg    db      " Genuine Intel Pentium(R) Pro processor$"
pentiumii_msg     db      " Genuine Intel Pentium(R) II processor$"
unknown_msg       db      "n unknown Genuine Intel processor$"

```

```

; The following 16 entries must stay intact as an array

```

```

intel_486_0      dw      offset intel486dx_msg
intel_486_1      dw      offset intel486dx_msg
intel_486_2      dw      offset intel486sx_msg
intel_486_3      dw      offset inteldx2_msg
intel_486_4      dw      offset intel486_msg
intel_486_5      dw      offset intelsx2_msg
intel_486_6      dw      offset intel486_msg
intel_486_7      dw      offset inteldx2wb_msg
intel_486_8      dw      offset inteldx4_msg
intel_486_9      dw      offset intel486_msg
intel_486_a      dw      offset intel486_msg
intel_486_b      dw      offset intel486_msg
intel_486_c      dw      offset intel486_msg
intel_486_d      dw      offset intel486_msg
intel_486_e      dw      offset intel486_msg
intel_486_f      dw      offset intel486_msg

```

```

;
;   comment the above entries for the array & uncomment the entries below for
;   for 32-bit segments
;

```

```

;intel_486_0      dd      offset intel486dx_msg
;intel_486_1      dd      offset intel486dx_msg
;intel_486_2      dd      offset intel486sx_msg
;intel_486_3      dd      offset inteldx2_msg
;intel_486_4      dd      offset intel486_msg
;intel_486_5      dd      offset intelsx2_msg
;intel_486_6      dd      offset intel486_msg
;intel_486_7      dd      offset inteldx2wb_msg
;intel_486_8      dd      offset inteldx4_msg
;intel_486_9      dd      offset intel486_msg
;intel_486_a      dd      offset intel486_msg
;intel_486_b      dd      offset intel486_msg
;intel_486_c      dd      offset intel486_msg
;intel_486_d      dd      offset intel486_msg
;intel_486_e      dd      offset intel486_msg
;intel_486_f      dd      offset intel486_msg

```

```

; end of array

```

```

family_msg       db      13,10,"Processor Family:  $"
model_msg        db      13,10,"Model:             $"
stepping_msg     db      13,10,"Stepping:          "
cr_1f            db      13,10,"$"
turbo_msg        db      13,10,"The processor is an OverDrive(R)"
                  db      " upgrade processor$"
dp_msg           db      13,10,"The processor is the upgrade"

```

```

fpu_msg      db      " processor in a dual processor system$"
              db      13,10,"The processor contains an on-chip"
              db      " FPU$"
vme_msg      db      13,10,"The processor supports Virtual"
              db      " Mode Extensions$"
de_msg       db      13,10,"The processor supports Debugging"
              db      " Extensions$"
pse_msg      db      13,10,"The processor supports Page Size"
              db      " Extensions$"
tsc_msg      db      13,10,"The processor supports Time Stamp"
              db      " Counter$"
msr_msg      db      13,10,"The processor supports Model"
              db      " Specific Registers$"
pae_msg      db      13,10,"The processor supports Physical"
              db      " Address Extensions$"
mce_msg      db      13,10,"The processor supports Machine"
              db      " Check Exceptions$"
cx8_msg      db      13,10,"The processor supports the"
              db      " CMPXCHG8B instruction$"
apic_msg     db      13,10,"The processor contains an on-chip"
              db      " APIC$"
sep_msg      db      13,10,"The processor supports Fast System"
              db      " Call$"
no_sep_msg   db      13,10,"The processor does not support Fast"
              db      " System Call$"
mtrr_msg     db      13,10,"The processor supports Memory Type"
              db      " Range Registers$"
pge_msg      db      13,10,"The processor supports Page Global"
              db      " Enable$"
mca_msg      db      13,10,"The processor supports Machine"
              db      " Check Architecture$"
cmov_msg     db      13,10,"The processor supports Conditional"
              db      " Move Instruction$"
mmx_msg      db      13,10,"The processor supports Intel Architecture"
              db      " MMX(TM) Technology$"

not_intel    db      "t least an 80486 processor."
              db      13,10,"It does not contain a Genuine"
              db      "Intel part and as a result,"
              db      "the",13,10,"CPUID"
              db      " detection information cannot be"
              db      "determined at this time.$"

ASC_MSG      MACRO msg
    LOCAL  ascii_done                ; local label
    add    al, 30h
    cmp    al, 39h                    ; is it 0-9?
    jle    ascii_done
    add    al, 07h
ascii_done:
    mov     byte ptr msg[20], al
    mov     dx, offset msg
    mov     ah, 9h
    int     21h
ENDM

```

```

        .code
;
;   comment the following line for 32-bit segments
;
        .8086
;
;   uncomment the following line for 32-bit segments
;
        .386
;
print proc

;   This procedure prints the appropriate cpuid string and
;   numeric processor presence status.  If the CPUID instruction
;   was used, this procedure prints out the CPUID info.
;   All registers are used by this procedure, none are
;   preserved.
;
;   In the balance of the assembly code there are lines that are required for
;   tools that support 32-bit segments only.  If problems occur during the
;   build process, try uncommenting the lines that are near duplicates of the
;   lines following them.  These will be the necessary changes to get code for
;   32-bit segments.

;   mov     edx, offset id_msg
;   mov     dx, offset id_msg           ; print initial message
;   mov     ah, 9h
;   int     21h

        cmp     _cpuid_flag, 1           ; if set to 1, processor
;                                           ; supports CPUID instruction
        je      print_cpuid_data         ; print detailed CPUID info

print_86:
        cmp     _cpu_type, 0
        jne     print_286
        mov     dx, offset cp_8086
        mov     ah, 9h
        int     21h
        cmp     _fpu_type, 0
        je      end_print
;   mov     edx, offset fp_8087
;   mov     dx, offset fp_8087
;   mov     ah, 9h
;   int     21h
;   jmp     end_print

print_286:
        cmp     _cpu_type, 2
        jne     print_386
;   mov     edx, offset cp_286
;   mov     dx, offset cp_286
;   mov     ah, 9h
;   int     21h
;   cmp     _fpu_type, 0
;   je      end_print

```

```

print_287:
;     mov edx, offset fp_287
;     mov  dx, offset fp_287
;     mov  ah, 9h
;     int  21h
;     jmp  end_print

print_386:
;     cmp  _cpu_type, 3
;     jne  print_486
;     mov  edx, offset cp_386
;     mov  dx, offset cp_386
;     mov  ah, 9h
;     int  21h
;     cmp  _fpu_type, 0
;     je   end_print
;     cmp  _fpu_type, 2
;     je   print_287
;     mov  edx, offset fp_387
;     mov  dx, offset fp_387
;     mov  ah, 9h
;     int  21h
;     jmp  end_print

print_486:
;     cmp  _cpu_type, 4
;     jne  print_unknown           ; Intel processors will have
;     mov  edx, offset cp_486sx    ; CPUID instruction
;     mov  dx, offset cp_486sx
;     cmp  _fpu_type, 0
;     je   print_486sx
;     mov  edx, offset cp_486
;     mov  dx, offset cp_486

print_486sx:
;     mov  ah, 9h
;     int  21h
;     jmp  end_print

print_unknown:
;     mov  edx, offset cp_error
;     mov  dx, offset cp_error
;     jmp  print_486sx

print_cpuid_data:
;     .486
;     cmp  _intel_CPU, 1           ; check for genuine Intel
;     jne  not_GenuineIntel       ; processor

print_486_type:
;     cmp  _cpu_type, 4           ; if 4, print 80486 processor
;     jne  print_pentium_type
;     mov  eax, dword ptr _cpu_signature
;     mov  ax, word ptr _cpu_signature
;     shr  ax, 4

```

```

        and     eax, 0fh                                ; isolate model
;       mov     edx, intel_486_0[eax*2]
        mov     dx, intel_486_0[eax*2]
        jmp     print_common

print_pentium_type:
        cmp     _cpu_type, 5                            ; if 5, print Pentium processor
        jne     print_pentiumpro_type
;       mov     edx, offset pentium_msg
        mov     dx, offset pentium_msg
        jmp     print_common

print_pentiumpro_type:
        cmp     _cpu_type, 6                            ; if 6 & model 1, print Pentium
                                                ; Pro processor
        jne     print_unknown_type
;       mov     eax, dword ptr _cpu_signature
        mov     ax, word ptr _cpu_signature
        shr     ax, 4
        and     eax, 0fh                                ; isolate model
        cmp     eax, 3
        jge     print_pentiumii_type
        cmp     eax, 1
        jne     print_unknown_type                    ; incorrect model number = 2
        mov     _sep_flag, 0                            ; does not support Fast System
                                                ; Call
;       mov     edx, offset pentiumpro_msg
        mov     dx, offset pentiumpro_msg
        jmp     print_common

print_pentiumii_type:
        cmp     eax, 3                                    ; if 6 & model 3, print Pentium
                                                ; II processor
        jne     print_unknown_type
;       mov     eax, dword ptr _cpu_signature
        mov     ax, word ptr _cpu_signature
        and     al, 0fh                                ; isolate stepping
        cmp     al, 3
        jl      no_sep
        mov     _sep_flag, 1
;       mov     edx, offset pentiumii_msg
        mov     dx, offset pentiumii_msg
        jmp     print_common

no_sep:
        mov     _sep_flag, 0                            ; stepping does not support
                                                ; Fast System Call
;       mov     edx, offset pentiumii_msg
        mov     dx, offset pentiumii_msg
        jmp     print_common

print_unknown_type:
;       mov     edx, offset unknown_msg
        mov     dx, offset unknown_msg                ; if neither, print unknown

print_common:

```

```

        mov     ah, 9h
        int     21h

; print family, model, and stepping

print_family:
        mov     al, _cpu_type
        ASC_MSG     family_msg             ; print family msg

print_model:
;       mov     eax, dword ptr _cpu_signature
        mov     ax, word ptr _cpu_signature
        shr     ax, 4
        and     al, 0fh
        ASC_MSG     model_msg             ; print model msg

print_stepping:
;       mov     eax, dword ptr _cpu_signature
        mov     ax, word ptr _cpu_signature
        and     al, 0fh
        ASC_MSG     stepping_msg          ; print stepping msg

print_upgrade:
;       mov     eax, dword ptr _cpu_signature
        mov     ax, word ptr _cpu_signature
        test    ax, 1000h                 ; check for turbo upgrade
        jz      check_dp
;       mov     edx, offset turbo_msg
        mov     dx, offset turbo_msg
        mov     ah, 9h
        int     21h
        jmp     print_features

check_dp:
        test    ax, 2000h                 ; check for dual processor
        jz      print_features
;       mov     edx, offset dp_msg
        mov     dx, offset dp_msg
        mov     ah, 9h
        int     21h

print_features:
;       mov     eax, dword ptr _features_edx
        mov     ax, word ptr _features_edx
        and     ax, FPU_FLAG              ; check for FPU
        jz      check_VME
;       mov     edx, offset fpu_msg
        mov     dx, offset fpu_msg
        mov     ah, 9h
        int     21h

check_VME:
;       mov     eax, dword ptr _features_edx
        mov     ax, word ptr _features_edx
        and     ax, VME_FLAG              ; check for VME
        jz      check_DE

```

```

;     mov     eax, offset vme_msg
;     mov     dx, offset vme_msg
;     mov     ah, 9h
;     int     21h

check_DE:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, DE_FLAG                ; check for DE
;     jz      check_PSE
;     mov     edx, offset de_msg
;     mov     dx, offset de_msg
;     mov     ah, 9h
;     int     21h

check_PSE:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, PSE_FLAG              ; check for PSE
;     jz      check_TSC
;     mov     edx, offset pse_msg
;     mov     dx, offset pse_msg
;     mov     ah, 9h
;     int     21h

check_TSC:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, TSC_FLAG              ; check for TSC
;     jz      check_MSR
;     mov     edx, offset tsc_msg
;     mov     dx, offset tsc_msg
;     mov     ah, 9h
;     int     21h

check_MSR:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, MSR_FLAG              ; check for MSR
;     jz      check_PAE
;     mov     edx, offset msr_msg
;     mov     dx, offset msr_msg
;     mov     ah, 9h
;     int     21h

check_PAE:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, PAE_FLAG              ; check for PAE
;     jz      check_MCE
;     mov     edx, offset pae_msg
;     mov     dx, offset pae_msg
;     mov     ah, 9h
;     int     21h

check_MCE:

```

```

;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, MCE_FLAG                ; check for MCE
;     jz      check_CX8
;     mov     edx, offset mce_msg
;     mov     dx, offset mce_msg
;     mov     ah, 9h
;     int     21h

check_CX8:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, CX8_FLAG                ; check for CMPXCHG8B
;     jz      check_APIC
;     mov     edx, offset cx8_msg
;     mov     dx, offset cx8_msg
;     mov     ah, 9h
;     int     21h

check_APIC:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, APIC_FLAG              ; check for APIC
;     jz      check_SEP
;     mov     edx, offset apic_msg
;     mov     dx, offset apic_msg
;     mov     ah, 9h
;     int     21h

check_SEP:
;     cmp     _sep_flag, 1
;     jne     print_no_sep
;     mov     edx, offset sep_msg
;     mov     dx, offset sep_msg
;     mov     ah, 9h
;     int     21h
;     jmp     check_MTRR

print_no_sep:
;     mov     edx, offset _no_sep_msg
;     mov     dx, offset no_sep_msg
;     mov     ah, 9h
;     int     21h

check_MTRR:
;     mov     eax, dword ptr _features_edx
;     mov     ax, word ptr _features_edx
;     and     ax, MTRR_FLAG              ; check for MTRR
;     jz      check_PGE
;     mov     edx, offset mtrr_msg
;     mov     dx, offset mtrr_msg
;     mov     ah, 9h
;     int     21h

check_PGE:
;     mov     eax, dword ptr _features_edx

```



```

        mov     ax, word ptr _features_edx
        and     ax, PGE_FLAG           ; check for PGE
        jz      check_MCA
;
        mov     edx, offset pge_msg
        mov     dx, offset pge_msg
        mov     ah, 9h
        int     21h

check_MCA:
;
        mov     eax, dword ptr _features_edx
        mov     ax, word ptr _features_edx
        and     ax, MCA_FLAG           ; check for MCA
        jz      check_CMOV
;
        mov     edx, offset mca_msg
        mov     dx, offset mca_msg
        mov     ah, 9h
        int     21h

check_CMOV:
;
        mov     eax, dword ptr _features_edx
        mov     ax, word ptr _features_edx
        and     ax, CMOV_FLAG          ; check for CMOV
        jz      check_mmx
;
        mov     edx, offset cmov_msg
        mov     dx, offset cmov_msg
        mov     ah, 9h
        int     21h

Check_MMX:
;
        mov     eax, dword ptr _features_edx
        mov     eax, word ptr _features_edx
        and     eax, MMX_FLAG          ; check for MMX technology
        jz      endprint
;
        mov     edx, offset mmx_msg
        mov     dx, offset mmx_msg
        mov     ah, 9h
        int     21h

        jmp     end_print

not_GenuineIntel:
;
        mov     edx, offset not_intel
        mov     dx, offset not_intel
        mov     ah, 9h
        int     21h

end_print:
;
        mov     edx, offset cr_lf
        mov     dx, offset cr_lf
        mov     ah, 9h
        int     21h
        ret
print endp

        end     start

```

Example 3. Processor Identification Procedure in the C Language

```

/* Filename:      cpuid3.c                                     */
/* Copyright 1994, 1995, 1996, 1997 by Intel Corp.           */
*/
/*
/* This program has been developed by Intel Corporation. Intel has
/* various intellectual property rights which it may assert under
/* certain circumstances, such as if another manufacturer's
/* processor mis-identifies itself as being "GenuineIntel" when
/* the CPUID instruction is executed.
*/
/*
/* Intel specifically disclaims all warranties, express or implied,
/* and all liability, including consequential and other indirect
/* damages, for the use of this program, including liability for
/* infringement of any proprietary rights, and including the
/* warranties of merchantability and fitness for a particular
/* purpose. Intel does not assume any responsibility for any
/* errors which may appear in this program nor any responsibility
/* to update it.
*/
/*
/* This program contains three parts:
/* Part 1: Identifies CPU type in the variable _cpu_type:
/*
/* Part 2: Identifies FPU type in the variable _fpu_type:
/*
/* Part 3: Prints out the appropriate message.
*/
/* This program has been tested with the Microsoft Developer Studio.
/* If this code is compiled with no options specified and linked
/* with the cpuid3a module, it correctly identifies the current
/* Intel 8086/8088, 80286, 80386, 80486, Pentium(R), Pentium(R) Pro
/* processors and Pentium(R) II processors in the real-address mode.
*/

#define FPU_FLAG          0x0001
#define VME_FLAG          0x0002
#define DE_FLAG           0x0004
#define PSE_FLAG          0x0008
#define TSC_FLAG          0x0010
#define MSR_FLAG          0x0020
#define PAE_FLAG          0x0040
#define MCE_FLAG          0x0080
#define CX8_FLAG          0x0100
#define APIC_FLAG         0x0200
#define SEP_FLAG          0x0800
#define MTRR_FLAG         0x1000
#define PGE_FLAG          0x2000
#define MCA_FLAG          0x4000
#define CMOV_FLAG         0x8000
#define MMX_FLAG          0x800000

extern char cpu_type;
extern char fpu_type;
extern char cpuid_flag;
extern char intel_CPU;

```

```
extern char vendor_id[12];
extern long cpu_signature;
extern long features_ecx;
extern long features_edx;
extern long features_ebx;

main() {
    get_cpu_type();
    get_fpu_type();
    print();
}

print() {
    printf("This system has a");
    if (cpuid_flag == 0) {
        switch (cpu_type) {
            case 0:
                printf("\n 8086/8088 processor");
                if (fpu_type) printf(" and an 8087 math coprocessor");
                break;
            case 2:
                printf("\n 80286 processor");
                if (fpu_type) printf(" and an 80287 math coprocessor");
                break;
            case 3:
                printf("\n 80386 processor");
                if (fpu_type == 2)
                    printf(" and an 80287 math coprocessor");
                else if (fpu_type)
                    printf(" and an 80387 math coprocessor");
                break;
            case 4:
                if (fpu_type) printf("\n 80486DX, 80486DX2 processor or \
80487SX math coprocessor");
                else printf("\n 80486SX processor");
                break;
            default:
                printf("\n unknown processor");
        }
    } else {
        /* using cpuid instruction */
        if (intel_CPU) {
            if (cpu_type == 4) {
                switch ((cpu_signature>>4)&0xf) {
                    case 0:
                    case 1:
                        printf(" Genuine Intel486(TM) DX processor");
                        break;
                    case 2:
                        printf(" Genuine Intel486(TM) SX processor");
                        break;
                    case 3:
                        printf(" Genuine IntelDX2(TM) processor");
                        break;
                    case 4:
                        printf(" Genuine Intel486(TM) processor");
```

```

        break;
    case 5:
        printf(" Genuine IntelSX2(TM) processor");
        break;
    case 7:
        printf(" Genuine Write-Back Enhanced \
IntelDX2(TM) processor");
        break;
    case 8:
        printf(" Genuine IntelDX4(TM) processor");
        break;
    default:
        printf(" Genuine Intel486(TM) processor");
    }
} else if (cpu_type == 5)
    printf(" Genuine Intel Pentium(R) processor");
else if ((cpu_type == 6) && (((cpu_signature >> 4) & 0xf) == 1))
    printf(" Genuine Intel Pentium(R) Pro processor");
else if ((cpu_type == 6) && (((cpu_signature >> 4) & 0xf) == 3))
    printf(" Genuine Intel Pentium(R) II processor");
else
    printf("\n unknown Genuine Intel processor");
printf("\nProcessor Family: %X", cpu_type);
printf("\nModel: %X", (cpu_signature>>4)&0xf);
printf("\nStepping: %X\n", cpu_signature&0xf);
if (cpu_signature & 0x1000)
    printf("\nThe processor is an OverDrive(R) upgrade \
processor");
else if (cpu_signature & 0x2000)
    printf("\nThe processor is the upgrade processor \
in a dual processor system");
if (features_edx & FPU_FLAG)
    printf("\nThe processor contains an on-chip FPU");
if (features_edx & VME_FLAG)
    printf("\nThe processor supports Virtual Mode \
Extensions");
if (features_edx & DE_FLAG)
    printf("\nThe processor supports the Debugging\
Extensions");
if (features_edx & PSE_FLAG)
    printf("\nThe processor supports Page Size \
Extensions");
if (features_edx & TSC_FLAG)
    printf("\nThe processor supports Time Stamp \
Counter");
if (features_edx & MSR_FLAG)
    printf("\nThe processor supports Model Specific \
Registers");
if (features_edx & PAE_FLAG)
    printf("\nThe processor supports Physical Address \
Extension");
if (features_edx & MCE_FLAG)
    printf("\nThe processor supports Machine Check \
Exceptions");
if (features_edx & CX8_FLAG)
    printf("\nThe processor supports the CMPXCHG8B \

```

```
instruction");
    if (features_edx & APIC_FLAG)
        printf("\nThe processor contains an on-chip APIC");
    if (features_edx & SEP_FLAG) {
        if ((cpu_type == 6) && (((cpu_signature >> 4) & 0xf) < 3)
            && ((cpu_signature & 0xf) < 3))
            printf("\nThe processor does not support the Fast \
System Call");
        else
            printf("\nThe processor supports the Fast System \
Call");
    }
    if (features_edx & MTRR_FLAG)
        printf("\nThe processor supports the Memory Type \
Range Registers");
    if (features_edx & PGE_FLAG)
        printf("\nThe processor supports Page Global Enable");
    if (features_edx & MCA_FLAG)
        printf("\nThe processor supports the Machine Check \
Architecture");
    if (features_edx & CMOV_FLAG)
        printf("\nThe processor supports the Conditional \
Move Instruction");
    if (features_edx & MMX_FLAG)
        printf("\nThe processor supports Intel Architecture \
MMX technology");
    } else {
        printf("t least an 80486 processor.\nIt does not \
contain a Genuine Intel part and as a result, the\nCPUID detection \
information cannot be determined at this time.");
    }
}
printf("\n");
}
```